



OWNER'S MANUAL

Model

DWC1233BL-SC

CAUTION:

Read and Follow All Safety Rules and Operating Instructions in this Manual Before First Use of This Product



12 Bottle Wine Cooler

OWNER'S MANUAL

Introduction 1

Safety Information 2

Installation / Part Identification 3

Operation 4

Warranty 5

SAVE THESE INSTRUCTIONS !

INTRODUCTION

Welcome to the Danby family! This owner's manual provides information necessary to the proper care and maintenance of your new appliance. If properly maintained, your Danby Maitre'D will give you many years of trouble free operation. To avoid difficulties, read instructions completely before starting. This manual contains information for the operation of your Danby Maitre'D.

For easy reference, you want to attach a copy of your sales receipt to this page. Note the following information provided. This information is needed when you contact a Customer Service Representative.

Model Number: _____ Date of Purchase: _____

Serial Number: _____ Dealer's Name: _____

SAFETY INFORMATION

IMPORTANT:

To reduce the risk of fire, burns, electric shock or injury to persons when using your appliance, follow basic precautions, including the following sections.

DANGER! **RISK OF CHILD ENTRAPMENT!**

An empty refrigerator is a very dangerous attraction to children. Remove either the gasket, latches, lids, lock and/or doors from unused or discarded appliances, or take some other action to guarantee it harmless.

DON'T WAIT, DO IT NOW!

Safety Precautions

- This appliance must be grounded. Connect only to a properly grounded outlet.
- Do not operate this appliance if it has a damaged power cord or plug, if it is not working properly, or if the appliance has been damaged or dropped.
- Do not splice the power cord that is equipped with this appliance.
- Keep power cord away from heated surfaces.
- Do not immerse power cord, plug or the appliance itself in water.
- Do not use this product near water—for example, in a wet basement, near a swimming pool or near a sink.
- Do not use corrosive chemicals or vapors in this appliance.
- Use this appliance only for its intended use, as described in this manual.
- Do not store perishable food items such as (but not limited to) meats and dairy products in your wine cooler.
- Store wine in sealed bottles only.
- Do not cover or block any openings on the appliance.
- This appliance is intended for household use only. Do not attempt to operate or store this appliance outdoors.

- This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair or adjustment.

Grounding Instructions

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a power cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or service technician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

For best operation, plug this appliance into its own electrical outlet to prevent flickering of lights, blowing of fuse or tripping of circuit breaker.

Do not under any circumstances cut or remove the third (ground) prong from the power cord.

Do not use an adapter plug with this appliance.


Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

SAVE THESE INSTRUCTIONS!

INSTALLATION

Part Identification

1. Glass Door
2. Control Panel
3. LCD Display
4. Interior Light (*not shown*)
5. Wine Racks
6. Door Hinge Cover
7. Adjustable Feet

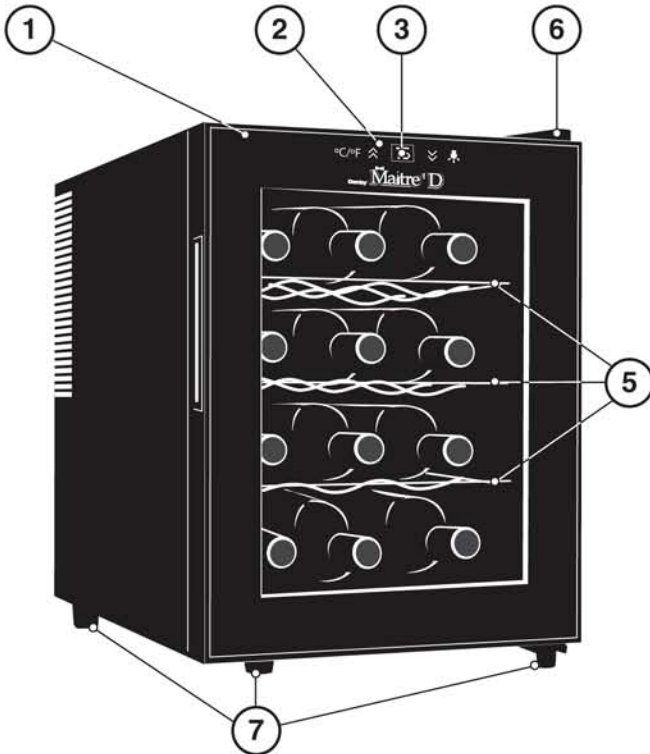

Location Requirements

- Select a location with a strong, level floor.
- Allow 5 inches of space between the back of the appliance and any adjacent wall.
- Avoid direct sunlight and heat. Direct sunlight may affect the acrylic coating, heat sources nearby will cause higher electricity consumption.
- **Do not** use this appliance outdoors: This appliance is intended for *household use only*. Do not attempt to operate or store this appliance outdoors.
- **Do not** build this appliance into an enclosure: This appliance is designed for a free-standing application only and is not intended to be "built-in".

Before Using your Wine Cooler

- Remove the exterior and interior packing
- Check to be sure the following parts are included:
 - 3 Slide-out shelves.
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded. To level your appliance, adjust the front legs at the bottom of the appliance.

OPERATION

Control Buttons



⏏ **Cooler (-1°C/°F)**
This touch-pad decreases the set temperature.

⏏ **Warmer (+1°C/°F)**
This touch-pad increases the set temperature.

°C/°F **Celsius and Fahrenheit**
°C means degrees Celsius and °F means degrees Fahrenheit.

💡 **Light**
This pad turns the interior light on or off.

Setting the Temperature

The temperature can be set between 10°C and 18°C (50°F and 64°F):

- To increase the set temperature, tap the **Warmer** touch-pad until you reach your desired temperature.

NOTE: When changing the temperature the *present* set temperature flashes in the LCD display. Press the **Cooler** or **Warmer** pad to change the set temperature. After a few seconds the set temperature stops flashing, and the display resumes showing the *actual* temperature inside the wine cooler.

- To decrease the set temperature, tap the **Cooler** touch-pad until you reach the desired temperature.

Changing Between °C and °F

- To change between °C (Celsius) to °F (Fahrenheit), tap the °C/°F pad once.

Turning the Light On or Off

You can set your display light to be continuously lit, or lit only when the door is open. To adjust the light setting:

- Tap the **Light** pad once to change the light setting.

Loading

Wine should be loaded with corks facing the door. This wine cooler is designed to hold no more than 12 standard 750ml wine bottles. Load the wine cooler as follows:

- Load up to 3 bottles per rack
- Load up to 3 bottles on the base of the wine cooler.



LIMITED WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workmanship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

This warranty is available only to the person to whom the unit was originally sold by Danby or by an authorized distributor of Danby, and is non-transferable.

TERMS OF WARRANTY

Plastic parts, are warranted for thirty (30) days only from purchase date, with no extensions provided.

First 3 Months During the first three(3) months, any electrical parts of this product found to be defective, will be repaired or replaced, at warrantor's option, at no charge to the ORIGINAL purchaser.

Additional 9 Months During the next nine (9) months any part of the electrical system found to be defective will be replaced without charge. The purchaser shall pay for all labor and return freight during this period for repair or replacement of any electrical components. Any unit being diagnosed as unrepairable warranting an exchange will be subject to an appropriate depreciation or user fee, including any and all freight charges being levied against the consumer.

To obtain Service Contact your dealer from whom your unit was purchased, or contact your nearest authorized Danby service center. If service is performed on the unit by anyone other than an authorized service depot, or the unit is used for commercial application, all obligations of Danby under this warranty shall be at an end.

Nothing within this warranty shall imply that Danby will be responsible or liable for any spoilage or damage to food or other contents of this appliance, whether due to any defect of the appliance, or its use, whether proper or improper.

EXCLUSIONS

Save as herein provided, Danby Products Limited (Canada) or Danby Products Inc. (U.S.A.), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by Danby Products Limited or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, Danby Products Limited (Canada) or Danby Products Inc. (U.S.A), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless Danby Products Limited from any claim for damages to persons or property caused by the unit.

GENERAL PROVISIONS

No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following:

- 1) Power Failure.
- 2) Damage in transit or when moving the appliance.
- 3) Improper power supply such as low voltage, defective house wiring or inadequate fuses.
- 4) Accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions, (extremely high or low room temperature).
- 5) Use for commercial or industrial purposes.
- 6) Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- 7) Service calls resulting in customer education.

Proof of purchase date will be required for warranty claims; so, please retain bills of sale. In the event warranty service is required, present this document to our AUTHORIZED SERVICE DEPOT.

Warranty Service

Carry-In



Model

DWC1233BL-SC

12 Bottle Wine Cooler

All repair parts available for purchase or special order when you visit your nearest service depot. To request service and/or the location of a service depot nearest you, call the TOLL FREE NUMBER.

When requesting service or ordering parts, always provide the following information:

- Product Type
- Model Number
- Part Number
- Part Description